

## U.S. ROADSIDE ASSISTANCE

FOR COMPLIMENTARY HELP CALL 1-800-241-3673

Quick access to the information below will get help to you faster. Know your vehicle's mileage and specific location.

NAME

VIN

Roadside Assistance services are available from the warranty start date and last for 5 years or 60,000 miles, whichever comes first.

## CANADA ROADSIDE ASSISTANCE

NAME

VIN

See Warranty Guide for complete details.

Download the Sykes4Ford Roadside Assistance App for access to your roadside assistance services.

Ford Motor Company reserves the right to modify or discontinue Roadside Assistance at any time. Certain restrictions apply to Roadside Assistance benefits.

For further details, call

1-800-241-3673 (United States)

1-800-665-2006 (Canada)

## ROADSIDE ASSISTANCE

### FLAT TIRES

It does seem that today nobody gets a flat tire, but what if you did? Roadside Assistance will change your tire for you. Tire change service requires the customer to have a usable spare tire.

### DEAD BATTERIES

Sure, even a good battery can go dead for one reason or another. Roadside Assistance will give your vehicle the jump-start it needs.

### LOCK OUTS

It's embarrassing, but it happens. We'll get you back in, fast... and it's free. Key replacement cost is the customer's responsibility.

### TOWING

Your car's not working... and you don't know why. Just make the call and we'll be there. Warranty Towing, Non-warranty Towing and Collision Towing are available.

### FUEL DELIVERY

You ran out of gas with no fuel station in sight. We'll bring the gas to you FREE. Limited to two, no-charge occurrences within a 12-month period. For the amount provided, please see your Owner's Manual.

### TRAILERS

If your vehicle requires towing while hauling a trailer, Roadside Assistance provides coverage for towing up to a maximum per event. Please see your Owner's Manual for details.

### WINCH OUT

If you should get stuck we'll pull you out (limited to events occurring within 100 feet (30 m) of a paved/county-maintained surface). Does not include winch out from standing water (recoveries).



This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

### WARNING:

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

### United States

Ford Customer Relationship Center

1-800-392-3673 (FORD)

(TDD for the hearing impaired: 1-800-232-5952)

owner.ford.com



@FordService

### Canada

Ford Customer Relationship Centre

1-800-565-3673 (FORD)

(TDD for the hearing impaired: 1-888-658-6805)

ford.ca



@FordServiceCA

## WARRANTY INFORMATION:

Your vehicle comes with a New Vehicle Limited Warranty. The express warranties of the New Vehicle Limited Warranty are in substitution for and exclude all other liabilities of any kind whether arising under statute, in tort, by implication of law or otherwise including, to the full extent as may be allowed by law, liability for any other representations respecting the vehicle, statutory warranties or implied warranties or conditions as to its merchantability or fitness.

Download a FREE electronic copy or order one FREE printed copy of the most up-to-date Warranty Guide by visiting the Owner Manuals section of [owner.ford.com](http://owner.ford.com). (United States)

For Canada, visit [ford.ca/warranty](http://ford.ca/warranty).

For Limo/Livery/Hearse vehicles: View and download your Warranty Guide by visiting the Warranty Information section of the Fleet website, [fleet.ford.com/limo](http://fleet.ford.com/limo). (United States only)

FORD  
MUSTANG  
2020  
QUICK REFERENCE GUIDE



# COMMONLY USED VOICE COMMANDS

Press the voice button  on the steering wheel and then say:

## GENERAL

- » Cancel
- » Help
- » Main Menu<sup>1</sup>
- » List of Commands

## AUDIO

- » Radio<sup>1</sup>
- » AM <frequency number>
- » FM <frequency number>
- » Bluetooth Stereo
- » USB

## NAVIGATION<sup>1,2</sup>

- » Find an Address
- » Find a Place
- » Drive Home
- » Drive to Work
- » Show Previous Destinations
- » Cancel Route
- » Show Route
- » Repeat Instruction
- » Show Map

## PHONE

- » Pair Phone
- » Call <contact name>
- » Call <contact name> <location><sup>1</sup>
- » Dial <number>

## CLIMATE<sup>1</sup>

- » Set Temperature \_\_\_

## SIRIUSXM® TRAFFIC

### AND TRAVEL LINK<sup>1,2,3</sup>

- » Show Traffic
- » Show Weather Map
- » Show Fuel Prices
- » Show 5-Day Forecast

## APPS<sup>2,3</sup>

- » Mobile Applications
- » List Applications
- » Find Applications
- » <Application Name> Help<sup>1</sup>



# TABLE OF CONTENTS

**Instrument Panel** .. 4–5

**SYNC** ..6–7

**SYNC 3** .....8–10

**Comfort** .....11

**Convertible Top** ..12–13

**Convenience**.....14

**Function**.....15–17

**Essential Features**.....18–19

## LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.

Some services may not be available in your area. Refer to your *Owner's Manual*, visit the website or call the toll-free number.

For U.S. customers: Visit [owner.ford.com](http://owner.ford.com) or call 1-800-392-3673.

For Canadian customers: Visit [syncmyride.ca](http://syncmyride.ca) or [syncmaroute.ca](http://syncmaroute.ca) or call 1-800-565-3673.

<sup>1</sup> only available with SYNC 3

<sup>2</sup> if equipped

<sup>3</sup> SiriusXM may not be available in all markets. Activation and a subscription are required.



[owner.ford.com](http://owner.ford.com) (U.S.)



[ford.ca](http://ford.ca) (Canada)



## 1 GLASSES HOLDER

To access the glasses holder tray, press near the center of the door. You can then pull out the tray.

## 2 CRUISE CONTROL

To set your cruise control speed:

1. Press and release **ON**.
2. Drive to your preferred speed.
3. Press and release **SET+** or **SET-**, then take your foot off the accelerator.
4. After you set a speed, you can press **SET+** or **SET-** to adjust the cruise speed.

To cancel the set speed, press and release **CNCL** or tap the brake pedal. To switch off, press **OFF** or switch the ignition off.

## 3 LIGHTING CONTROL

- ☐ Switches off the headlamps.
- ☞ Switches on the parking, instrument panel, license plate and tail lamps.
- ☞ Switches on the headlamps.
- ☞ Autolamps\* automatically switch the exterior lamps on or off based on the available daylight.
- ☞ Switches the fog lamps\* on or off.

## 4 SERVICE ENGINE SOON LIGHT

Lights briefly when you switch the ignition on. If it remains on or is blinking after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion (avoid heavy acceleration and deceleration) and contact an authorized dealer as soon as possible.

## 5 INFORMATION DISPLAY

Provides information about various systems on your vehicle. Use the information display controls on the steering wheel to choose and confirm settings and messages. Refer to the *Information Displays* chapter in your *Owner's Manual* for more information.

## 6 STEERING WHEEL MEDIA CONTROLS

- VOL +** or **-** Press to increase or to decrease volume levels.
- ◀ or ▶ Press to access the previous or next media selection.
- ✕ Press to silence the current media.

- ☞ Press to access voice recognition.
- ☞ Press to exit a menu.
- ☞ Press to end a call.
- ☞ Press to access phone mode or to answer a phone call.

You can also use the steering wheel buttons to control the SYNC 3 screens including the audio, settings, navigation\* and information display options.

## 7 KEYLESS STARTING

You can start your vehicle by pressing the brake pedal (automatic transmission) or clutch pedal (manual transmission), and then pressing the **START STOP** button. Press the button again, without applying the brake, to switch the engine off. If you leave your vehicle idling for an extended period of time, the engine shuts down automatically. Before this happens, a message appears in the information display, allowing you time to override the shutdown feature. If you try to leave the vehicle when it is still on, the horn will sound twice.

**Note:** A valid key must be inside the vehicle for the ignition to start.

SYNC is an in-vehicle communications system that works with your *Bluetooth* wireless technology-enabled phone and portable media player.

## SUPPORT

SYNC support is available at your regional Ford website

[www.syncmyride.com](http://www.syncmyride.com) (United States)

[www.syncmyride.ca](http://www.syncmyride.ca) or [www.syncmaroute.ca](http://www.syncmaroute.ca) (Canada)

## DRIVING RESTRICTIONS

For your safety, certain features are speed-dependent and restricted when your vehicle is traveling over 3 mph (5 km/h).

## PAIRING YOUR PHONE WITH SYNC

Wireless pairing of your phone with SYNC allows you to make and receive hands-free calls.

### To Pair Your Phone For the First Time:

1. Make sure to switch on your phone's *Bluetooth* feature before starting the search. See your device's manual if necessary.
2. Press the **Settings** button.
3. Select **Bluetooth** from the menu.
4. Press the **OK** button.
5. Select the option to add. This starts the pairing process.

6. When a message to begin pairing appears in the audio display, search for SYNC on your device.


 
7. When prompted on your phone's display, confirm that the PIN provided by SYNC matches the PIN displayed on your phone. Your phone is now paired and the display indicates that the pairing was successful. If you are prompted to enter a PIN on your device, enter the PIN displayed on the screen. The display indicates when the pairing is successful.

Depending on your phone's capability and your market, the system may prompt you with questions, such as setting the current phone as the primary phone and downloading your phone book.

## PHONE CONTROLS

You can use the phone buttons on your steering wheel to answer, reject or end a call.

## HELPFUL HINTS

- » When using voice commands, make sure the interior of your vehicle is as quiet as possible. Wind noise from open windows and road vibrations may prevent the system from correctly recognizing spoken commands.
- » Before giving a voice command, wait for the system announcement to finish, followed by a single tone. Any command spoken before this does not register with the system.
- » Speak naturally, without long pauses between words.
- » You can interrupt the system at any time while it is speaking by pressing the voice button . You can cancel a voice session by pressing and holding the voice button .

## PHONE MENU

Through the phone menu, you can access your call history, phone book, text messages, phone settings and system settings.

Press the phone button. Then you can scroll through the menu and select the feature you want to view.

## APPS

AppLink enables voice and steering wheel control of certain smartphone apps. Once an app is running through AppLink, you can control the main features of the app through voice commands and steering wheel controls.

**Note:** You must pair and connect your smartphone to SYNC to access AppLink.

## USING SYNC TO ACCESS DIGITAL MEDIA

Using the system, you can access media from your iPod, *Bluetooth* device and most USB drives. SYNC also supports audio formats, such as MP3, WMA, WAV and ACC.

## MEDIA SOURCES

Press the **MEDIA** or **AUX** button to view your sources. Use the directional arrows or tune knob and **OK** button to select your source. You can also use the steering wheel audio controls.

# SYNC® 3\*

SYNC 3 allows you to interact with a variety of features using the touchscreen and voice commands. The system provides easy use of the system elements like audio, phone, mobile apps and settings.

## USING THE TOUCHSCREEN


Use the touchscreen to navigate the SYNC 3 features. The status bar on the top of the screen contains the home button, clock, outside temperature and status bar icons that inform you about the system. The feature bar allows you to select system features like audio and settings. For your safety, some features are speed-dependent. Their use is limited to when your vehicle speed is less than 3 mph (5 km/h).


## UPDATING YOUR SYSTEM

System updates are available through the local Ford website by USB or by connecting your vehicle to a Wi-Fi network connection. With a network connection, you can have your SYNC 3 system update automatically as well. Please see the *SYNC 3* chapter of your *Owner's Manual* for more information on updating your system.

## USING VOICE RECOGNITION

Using voice commands allows you to keep your hands on the wheel and focus on what is in front of you. To activate the SYNC 3 voice commands, press the voice button on the steering wheel and wait for the prompt.

- » Press the  button during any system voice prompt to interrupt the prompt and begin your voice command.

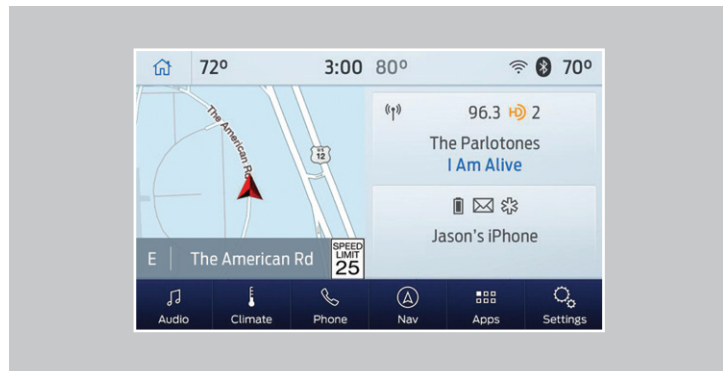


- » To adjust the volume of the system voice prompts, turn the volume control when a voice prompt is playing.
- » To use Siri on your iOS device, press and hold the voice control button on the steering wheel.

You can find the available voice commands in the *SYNC 3* chapter of your *Owner's Manual* or in the *Commonly Used Voice Commands* in this guide.

## PAIRING YOUR PHONE FOR THE FIRST TIME

Switch on *Bluetooth* on your device to begin pairing. Check the compatibility of your device on the local Ford website.

To add your phone:

1. Select the phone  option on the feature bar.
2. Select **Add Phone**.
3. A prompt alerts you to search for the system on your phone.
4. Select your vehicle on your phone.
5. Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
6. The touchscreen indicates when the pairing is successful.
7. Download the phonebook from your phone when you are prompted.

To pair subsequent phones, please see the *SYNC 3* chapter in your *Owner's Manual*.

## USING YOUR CONNECTED PHONE

To make calls, select from your contacts, recent calls or dial the number on the phone keypad. From the phone menu, you can also adjust phone settings, change devices or mute your phone. The do not disturb mode rejects all incoming calls and switches off ring tones and alerts.

## NETWORK CONNECTIVITY

The modem allows you to connect your vehicle to the Internet to use when you are on the road. See your *Owner's Manual* to enable the modem using the FordPass App. Once the modem is enabled, you can locate and remotely start, lock and unlock your vehicle. You can also access automatic system updates. More information is available through the FordPass App.


The modem has a SIM. The modem was enabled when your vehicle was built and periodically sends messages to stay connected to the cell phone network, receive automatic software updates and send vehicle-related information to us, for example diagnostic information. These messages could include information that identifies your vehicle, the SIM and the electronic serial number of the modem. Cell phone network service providers could have access to additional information, for example cell phone network tower identification. For additional information about our privacy policy, visit [www.FordConnected.com](http://www.FordConnected.com) or refer to your local Ford website.

## APPLE CARPLAY AND ANDROID AUTO

To use Apple CarPlay and Android Auto, connect your device to a USB port and follow the instructions on the touchscreen.

Certain SYNC 3 features are not available when you are using Apple CarPlay or Android Auto.

Android Auto may need to be enabled from the settings menu. You can switch Apple CarPlay or Android Auto off through the settings menu. See the *SYNC 3* chapter of your *Owner's Manual* for more information.

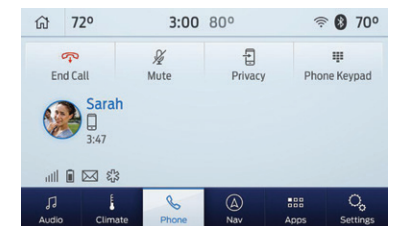

# SYNC® 3\* (CONTINUED)

## AUDIO



You can select from a variety of entertainment options including AM/FM radio, USB, *Bluetooth* Stereo and Apps.


## PRESETS

To set a new preset, tune to the station and then press and hold one of the preset buttons. The audio mutes briefly while the system saves the station and then returns. To access additional presets, swipe left.

## CLIMATE

You can adjust climate control features, including the temperature, airflow direction, fan speed and other climate features. You can also use voice commands to make climate adjustments.

## NAVIGATION

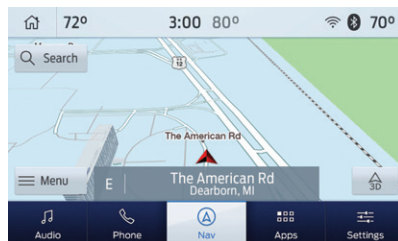

You can set your destination using the text entry or map screen. Using text entry, you can search by entering all or part of the destination, such as the address, intersection or city. Using the map screen, you can select a location on the map, then select **Start** to begin the route guidance.

You can adjust the map to display in two dimensional or three dimensional mode. You can also zoom in or out of the map by using a pinching gesture. During route guidance, you will see a turn indicator, points of interest on the map, your current road and an option to mute the guidance prompts. You can press the button in the top right-hand corner of the main map to display estimated time of arrival, remaining travel time or distance to your destination.

## SETTINGS

Under the Settings menu, you can access and adjust the settings for many of the system features. Once you select a tile, press the **i** to view an explanation of the feature or setting.

## APPS

The system allows you to interact with select mobile apps while keeping your eyes on the road. Voice commands, your steering wheel buttons, or a quick tap on your touchscreen give you advanced control of compatible mobile apps. You can also stream your favorite music or podcasts, share your time of arrival with friends, and keep connected safely. For more information on connecting apps to your system, please see the *SYNC 3* chapter of your *Owner's Manual*.

# COMFORT

## POWER LUMBAR\*


The power lumbar control is on the side of the driver seat.


Press one side of the control to increase lower back firmness. Press the other side of the control to decrease lower back firmness.

## HEATED STEERING WHEEL\*

Your vehicle may come with a heated steering wheel. Press the icon on your touchscreen to turn this feature on and off.

## CLIMATE CONTROLLED FRONT SEATS\*

Touch the heated seat symbol  to cycle through the various heat settings and off. More lights indicate warmer settings.

Press the cooled seat symbol  to cycle through the various cooling settings and off. More lights indicate cooler settings.

## AUTOMATIC TEMPERATURE CONTROL\*

To use, press the **AUTO** control and then select the desired temperature using the control. Set an independent temperature for the front-seat passenger using the passenger-side rotary control.

Press the **AUTO** control to switch back to a single-zone temperature control.

## GLOBAL OPENING\*

You can use the remote control to operate the windows with the ignition off.

You can open the windows for a short time after you unlock your vehicle with the remote control. After you unlock your vehicle, press and hold the remote control unlock button to open the windows. Release the button once movement starts. Press the remote control lock or unlock button to stop movement.

**Note:** You can enable or disable this feature in the information display, or see an authorized dealer. To operate this feature, you must deactivate the accessory delay.

## REAR SEAT ACCESS

Use the seatback release to fold the back of the front seat forward. This release handle is on the upper back of the front seat. The seatback recline feature has memory and locks automatically into the original position.



# CONVERTIBLE TOP\*

## OPENING THE CONVERTIBLE TOP

1. Bring the vehicle to a complete stop. Leave the engine running while opening the convertible top to prevent draining the battery.
2. Move the latch handle above the interior mirror down toward the windshield and rotate the handle clockwise to release the convertible top.
3. Press and hold the convertible top control on the overhead console until the windows are down completely and the top is stored fully.

## USING THE TONNEAU CAPS

Your convertible top also includes two tonneau caps, one for each side of the vehicle. You can stow these caps inside the luggage compartment.

After opening your convertible top, place the tonneau caps between the top and your vehicle trim molding by doing the following:

1. Insert the leading edge under the trim.
2. When the leading edge is under the trim slot, angle the side edge down so the edges slide under the surrounding molding. Secure the side edge into place between the trim edges.
3. Repeat steps 1 and 2 on the opposite side of the vehicle to install the second tonneau cap.

**Note:** Remove the tonneau caps before attempting to close the convertible top or a tone sounds and a warning message appears in the instrument panel. If this happens, remove and stow the caps, and then press the convertible top control again.

\*if equipped



## CLOSING THE CONVERTIBLE TOP

1. Bring the vehicle to a complete stop and leave the engine running while closing the convertible top to prevent draining the battery. Remove the tonneau caps.
2. Press and hold the convertible top control as the top unfolds and moves forward toward the windshield header.
3. When the top lines up evenly with the windshield header, release the convertible top control.
4. Pull down on the latch handle and rotate it counterclockwise to secure the convertible top.
5. After securing the convertible top fully, push the latch handle up into the stowed position to lock the latch, and then use the power window controls to close the windows.

**Note:** If the top has been open for an extended period of time or if the temperature is low, the top material may shrink slightly. If this happens, extra force on the latch handle may be needed to secure the top.

For complete information, refer to the **Convertible Top** chapter of your **Owner's Manual**.

## TIPS WHEN USING YOUR CONVERTIBLE TOP

Do not store articles behind the rear seat. Articles stored in the convertible top stowage compartment may break the rear glass window when you open the top.

The windows lower automatically when opening the top.

Do not lower the top when the top material is wet. Remove any leaves or debris from the outer surface of the top.

The convertible top does not operate unless the vehicle is stationary or traveling under 3 mph (5 km/h).

**Note:** You must switch your ignition on to open or close the convertible top. We recommend that you leave the engine running to prevent draining the battery.



# CONVENIENCE

## AUTOWIPERS\*

The feature uses a rain sensor that is in the area around the interior mirror. The rain sensor monitors the amount of moisture on the windshield and automatically turns on the wipers. The sensor also adjusts the wiper speed in proportion to the amount of moisture that the sensor detects on the windshield.

You can switch this feature on and off in the information display.

**Note:** Make sure you switch off the windshield wipers before entering a car wash.




## AUTOLAMPS

The headlamps turn on and off automatically in low-light situations or during inclement weather. The headlamps remain on for a period of time after you switch the ignition off.

Use the information display controls to adjust the period of time that the headlamps remain on.

## REMOTE START\*

Remote start allows you to start the engine from outside your vehicle using your key.

To start, press  and then press  twice within three seconds. Before driving your vehicle, you must press the push button ignition switch on the instrument panel while applying the brake pedal. You can also turn your vehicle off from outside after a remote start by pressing  once. If your vehicle is equipped with remote feedback, an LED on the key provides status feedback of remote start or stop commands. A solid green light means the remote start or extension was successful while a blinking red light

means the remote start or stop has failed. A solid red light means that the remote stop was successful and the engine is off. When the system is waiting for a status update from the vehicle, you will see a blinking green light.

## CAR CLEANING TIPS

Do not use chemical solvents or strong detergents when cleaning the steering wheel, instrument panel or seats. See the **Vehicle Care** chapter in your **Owner's Manual** for details.

## INTELLIGENT ACCESS LUGGAGE COMPARTMENT RELEASE

With your keyless remote within 3 feet (1 meter) of your vehicle, press the exterior release button hidden above the license plate.



\*if equipped

# FUNCTION

## SELECTABLE DRIVING AND STEERING MODES\*

Through a suite of sophisticated electronic vehicle systems, you can optimize steering, handling and powertrain response. To change the mode settings, use the mode switch on the instrument panel. The first press of the mode button illuminates the selected mode. Subsequent presses change the selected mode. See the **Driving Aids** chapter of your **Owner's Manual** for complete details.

## MY MODE\*

My Mode can be used to apply your custom settings to a selectable drive mode. Press the pony button on the steering wheel and access the menu where you can create or save My Mode.

## DRIVING MODES\*

**Normal** – Delivers a balanced combination of comfort and handling. This mode provides an engaging drive experience and a direct connection to the road without sacrificing any of the composure demanded from your vehicle.

**Sport+** – Provides a sportier steering feel and throttle response. Sport+ mode is ideal for use during more spirited driving.

**Track** – Provides a performance driving experience. The engine responds directly to your inputs and takes on a more powerful tone. Use track mode when you desire pure performance.

**Snow/Wet** – Provides a confident handling driving experience during poor weather without sacrificing any of the composure demanded from your vehicle.

**Drag Strip** – Provides a performance driving experience tailored to driving on a drag strip. The engine responds directly to your inputs, and if your vehicle is equipped with active exhaust, it takes on a more powerful tone. This mode is not intended for public roads.

## STEERING MODES

**Normal** – Default factory setting.

**Sport** – Slightly higher effort required for steering with more road force felt through the steering wheel.

**Comfort** – Slightly less effort required for steering with less road force felt through the steering wheel.

After selecting the desired setting, you may feel a soft feedback bump in the steering wheel when the changeover occurs.

**Note:** If your vehicle includes the selectable drive modes feature, the steering feel changes when you select a new drive mode. You can override this automatic selection by selecting an alternative steering mode.



\*if equipped



# FUNCTION (CONTINUED)

## BLIND SPOT INFORMATION SYSTEM (BLIS®)\*

BLIS aids you in detecting vehicles that may have entered your blind spot zone. The detection area is on both sides of the vehicle, extending rearward from the exterior mirrors to approximately 13 feet (4 meters) beyond the bumper. When the system detects a vehicle, an alert indicator illuminates in the exterior mirror on the side from which the approaching vehicle is coming. When your speed is greater than 30 mph (48.3 km/h), the detection area extends to approximately 59 feet (18 meters) beyond the rear bumper. If you turn the direction indicator on for that side of your vehicle, the alert indicator flashes. See the *Driving Aids* chapter of your *Owner's Manual* for details.

## PRE-COLLISION ASSIST\*

This system is designed to alert you of certain collision risks. A camera and radar sensor detects if your vehicle is rapidly approaching a stationary vehicle, a vehicle traveling in the same direction as yours or a pedestrian within your driving path. The system is designed to provide three levels of notification functionality: Alert, Brake Support and Active Emergency Braking.

**Alert:** When activated, a flashing visual warning and an audible warning chime sounds.

**Brake Support:** Assists the driver in reducing collision speed by preparing the brake system for rapid braking. Brake support does not automatically activate the brakes, but if the driver presses the brake pedal even lightly, brake support could add additional braking up to full force.

**Active Braking:** Active braking may activate if the system determines that a collision is imminent. The system may help the driver reduce impact damage or avoid the crash completely.

Your pre-collision assist may also have the following feature:

**Distance Indication and Alert:** Distance Indication is a function that provides a graphical indication of the time gap to other vehicles traveling in the same direction.



## CROSS TRAFFIC ALERT\*

Cross Traffic Alert warns you of vehicles approaching from the sides when the transmission is in reverse (R). The system illuminates an alert indicator in the outside mirror on the side of your vehicle from which the approaching vehicle is coming. Cross Traffic Alert also sounds an audible alert and a message appears in the information display. This system also works with the reverse sensing system that sounds its own series of tones. See the *Driving Aids* chapter of your *Owner's Manual* for details.

**Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and system limitations.

## REAR PARKING AID\*

The rear sensors are active only when the transmission is in reverse (R). As your vehicle moves closer to the obstacle, the rate of the audible warning increases. The system detects certain objects when the transmission is in reverse (R) and the vehicle is traveling at a speed of 3 mph (5 km/h) or less.

See the *Parking Aids* chapter of your *Owner's Manual* for details.

## TRACTION CONTROL

The system automatically turns on each time you switch the ignition on. If your vehicle is stuck in mud or snow, switching traction control off may be beneficial as this allows the wheels to spin.

The switch for the stability and traction control system is on the instrument panel.

When you switch the system off, a message and an illuminated icon appear on the instrument cluster.

\*if equipped

Use the switch again to return the traction control system to normal operation.

**Note:** When you switch traction control off, stability control remains fully active.

## ELECTRONIC STABILITY CONTROL

The system automatically activates when you start your engine. The electronic stability control portion of the system disables when the transmission is in reverse (R), or on some models, if you press and hold the stability control button for more than five seconds when you apply the brakes and the vehicle is at a stop. You can switch off the traction control portion of the system independently. See the *Stability Control* chapter of your *Owner's Manual* for details.

## LANE KEEPING SYSTEM

When you switch the system on and the system detects an unintentional drift out of your lane is likely to occur, the system notifies or assists you to stay in your lane through the steering system and information display. Depending on the feature operation mode you select, the system provides a warning by vibrating the steering wheel (Alert Mode) or a steering assistance (Aid Mode) by gently counter steering your vehicle back into the lane. The system can also provide both warning (vibrating the steering wheel) and steering assistance (gently counter steering your vehicle back into the lane) while Aid+Alert mode is selected.

You can switch the system on or off by pressing the button on the direction indicator.

Refer to the *Driving Aids* chapter of your *Owner's Manual* for system operation and limitations.

# ESSENTIAL

## DIGITAL INFORMATION DISPLAY\*

Using the 12-inch LCD digital instrument cluster and the Quick Action Menu (QAM) buttons on the right-hand side of the steering wheel, you can control many of the vehicle systems. Your cluster can display various modes and information depending on the menu, your settings and your vehicle's options. Using the QAM buttons, you can select audio, phone, navigation, settings and pony.

Selecting audio, phone or navigation allows you to access the SYNC 3 cluster menus. Refer to the **SYNC 3** chapter in your *Owner's Manual*.

## SETTINGS

The settings menu allows you to change the settings for the vehicle, such as the trip/fuel info, driver assist and advanced settings.

From the driver assist menu, you can configure settings for the driver assist technologies, such as blind spot, pre-collision assist and lane keeping system.

The advanced settings menu allows you to access the settings for MyKey, vehicle options and display settings.

## PONY

The pony menu provides access to a suite of exciting features. Through the pony menu, you can view the My Mode screens, exhaust mode settings, Track Apps™, performance shift indicator, launch control, gauges, Rev Match\*, MyColor and cluster appearance.

Exhaust mode allows you to choose the vehicle's exhaust mode from options such as track exhaust mode or quiet.

Track Apps™ provides many options to record and optimize your track performances. Please refer to the **Track Use** chapter of your *Owner's Manual*.

Through the performance shift indicator menu, you can adjust the shift point, tone and light mode.

The launch control menu contains the launch control and RPM options.

The gauges menu options include show gauges and configure MyGauges.

MyColor lets you select a primary or secondary color, ambient lighting options or create a custom MyColor.

Cluster appearance allows you to select the cluster display you want to see.


# FEATURES

## TIRE SEALANT AND INFLATOR KIT\*

This kit provides a temporary tire repair, allowing you to drive your vehicle up to 120 miles (200 kilometers) at a maximum speed of 50 mph (80 km/h) to reach a tire service location. The kit, under the load floor in the luggage compartment, includes an air compressor to re-inflate the tire and a canister of sealing compound that effectively seals most punctures caused by nails or similar objects. Refer to the **Wheels and Tires** chapter of your *Owner's Manual* for more information.

## TIRE PRESSURE MONITORING SYSTEM

The tire pressure monitoring system allows you to view the tire pressure readings through the information display. When one or more of your tires are under-inflated, your vehicle turns on the low tire pressure warning light (⚠) in the instrument cluster. If this happens, stop and check your tires

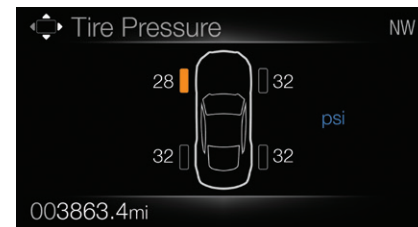

\*if equipped

as soon as possible. Inflate them to the proper pressure. Refer to the **Wheels and Tires** chapter of your *Owner's Manual* for more information.

## MANUAL TRANSMISSION LOCKOUT\*

Your manual transmission has a lockout feature that protects you from accidentally moving the transmission into reverse (R). To shift into reverse (R):

1. Press the clutch pedal to the floor to disengage the clutch.
2. Raise the collar below the gearshift knob up, then move the lever fully to the left, then forward.



**Note:** If you have trouble engaging the gear, return the gearshift to neutral (N) and then release the clutch. Repeat steps 1 and 2.

\*if equipped



## ROADSIDE ASSISTANCE

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance.

To receive roadside assistance in the United States, call **1-800-241-3673**. In Canada, call **1-800-665-2006**.

Ford Motor Company gives you peace of mind with the complimentary Roadside Assistance Program. Services are available from the warranty start date and last for 5 years or 60,000 miles (100,000 km), whichever occurs first.

Roadside Assistance is honored throughout the 50 states, Puerto Rico and Canada.

Towing services are available to any qualified Ford or Lincoln dealer within the distance limits stated in your Owner's Manual.

If you're out of warranty coverage but need Roadside Assistance, you can still access the service you need by paying a one-time fee.

For additional information please visit:

**US:**  
<https://owner.ford.com/service/roadside-assistance.html>

**Canada:**  
<https://www.ford.ca/owners/packages/roadside-assistance>



The Sykes4Ford Roadside App (Canada only) is available via the Apple App Store® or Google Play™

## U.S. ROADSIDE ASSISTANCE 1-800-241-3673 24 hours a day, 7 days a week

- Towing
- Battery Jump-Start
- Fuel Delivery
- Lock-out Assistance
- Flat Tire Change
- Winch Out
- Other Roadside Services



## CANADA ROADSIDE ASSISTANCE 1-800-665-2006 or download the Sykes4Ford app

- Towing
- Battery Boosting
- Fuel Delivery
- Lock-out Assistance
- Flat Tire Change
- Winch Out
- Other Roadside Services



For future quick reference, enter your vehicle information on the back of your Roadside Assistance Card and place it in your wallet.